


VIEW 4
FUEL PUMP AND FUEL STRAINER ASSEMBLY

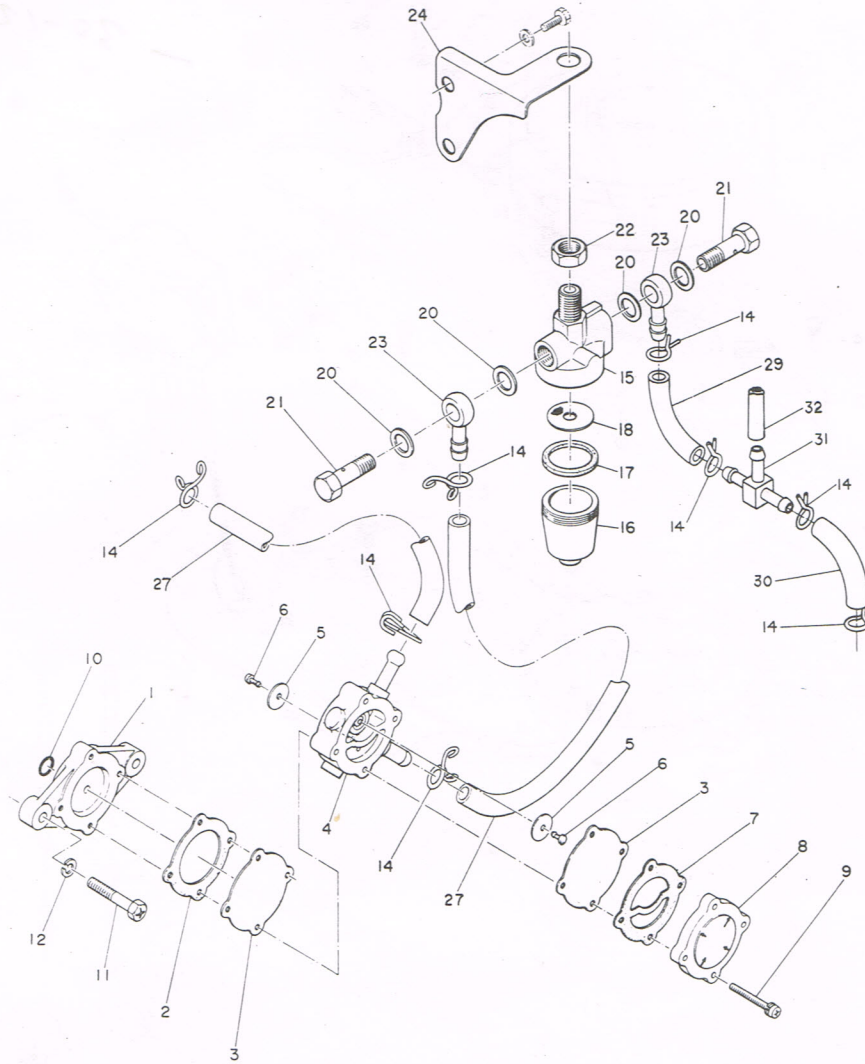

DWG ITEM	SURF-JET P/N	DESCRIPTION	QTY	FRT
1-10	1001520	FUEL PUMP ASSY.	1	0.1
2	1001530	PACKING	1	
3	1001540	DIAPHRAGM	2	0.3
7	1001550	PACKING	1	
9	1001560	SCREW	4	
10	1001570	"O" RING	1	
11	1001590	BOLT, CROSS RECESS	2	
12	1001630	SPRING WASHER	2	
14	1001430	HOSE CLAMP	8	
15-22	1001500	FUEL STRAINER ASSY.	1	
16	1001510	CUP	1	
17	1001450	RUBBER PACKING	1	
18	1001460	FILTER SCREEN	1	0.1
20	1001470	GASKET, FIBER	4	
21	1001480	BANJO BOLT	2	
22	1001490	LOCK NUT	1	
23	1001420	BANJO	2	

DWG ITEM	SURF-JET P/N	DESCRIPTION	QTY	FRT
24	1001580	BRACKET, STRAINER	1	
27	1001410	RUBBER PIPE	AR	
29	1002820	RUBBER PIPE, 5"	1	
30	1002870	RUBBER PIPE, 2.5"	1	
31	1003000	TEE FITTING	1	
32	1002970	PRIMER LINE, 3 FT.PACK.	AR	
	1005770	FUEL PUMP REPAIR KIT, INCLUDES; 2 #1001540 DIAPHRAGM 1 #1001550 PACKING 1 #1001530 PACKING 1 #1001570 "O" RING		
	1005760	FUEL STRAINER REPAIR KIT, INCLUDES; 4 #1001470 GASKET,FIBER 1 #1001460 FILTER SCREEN 1 #1001450 RUBBER PACKING		